

In order not to break the IP67 approval, we recommend not to replace the batteries.

The TRACK 1100 ships with a standard battery pack BAT 8204. Please order these battery packs and replace with these battery packs.



Step 1

Turn the tracker face down and unscrew the 6 screws.

Tip: If using a power drill, use power setting 7, on low. (Note: not all power drills have the same settings!)



Step 2

Remove the back plate and the 6 screws. You will need a screwdriver to open the tracker.



Step 3

Remove the circuit board and the battery pack.



Step 4

Turn around the circuit board and battery pack





Remove the battery pack - pull them out of the connector.





Step 6

Add a new battery pack, be carefull with the connector. A green LED will blink when the battery pack is connected.





Step 7

Reinsert the circuit board and battery pack. Make sure the LED is facing downward and the foam on the battery is facing upwards.

Step 8

Close the case again by tightening the 6 screws in the corresponding holes. Be careful not to break the casing when using a power drill.

Indicate battery replaced in platform

TEM												Se	arch		(ર	C	?	₽ (
- 📦 (Container 1234																		👁 Vie
racker info	Configuration Subscripti	ion Battery	y Di	Diagnos	stic														More
ttery sta	tus																		
		Status 이	ж																
11	19%	Battery is	; estin	imated t	to last	t till Jar	nuary 2	2029 (s	still 60 ı	months	s rema	iining).							
	1970	Battery co Intended	onsur batte	umption tery life	n starte e is set t	ed on 2 to 7 ye	22 Janu ears (at	iary 20 t least	022 till 2 Fe	b 2029).								
		Replace b	patter	ery Ma	ark em	npty F	Reset in	ntende	ed batte	<u>ery life</u>	Reca	lculate	2						
																	Q	_	

Replace battery	×
Do you want to replace the battery? It will reset all battery information.	c
	Replace

When you replaced the battery in the tracker you have to indicate thet in the platform.

- Go to the tracker details page in the general section. You can search for this tracker or find in in the asset list or asset map.
- Click ont the settings button on the far right
- Go to the battery tab
- Click replace battery

www.sensolus.com | info@sensolus.com